

Spa24 Template

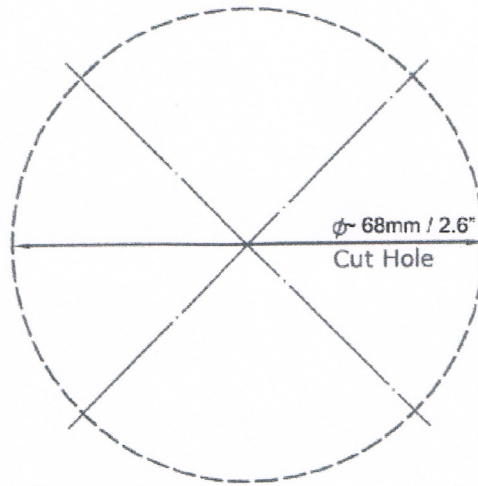


Illustration May Not Be To Scale

Installation

- 1) Find a location which allows speaker to lay flat
- 2) Use template for appropriate spacing
- 3) Mark and cut a 68.0 mm (2.6" >) hole
- 4) Connect (+) speaker wire to large tab. (-) speaker wire to small tab
Note: Feed speaker wires through wall-fitting nut prior to attaching speaker wires
- 5) Apply small film of non-caustic RTV/Marine silicone to speaker gasket.
- 6) Apply small amount of non-caustic RTV/Marine silicone to rear of clean surface
- 7) Tighten wall-fitting nut for a firm and snug seal. DO NOT over-tighten

Note: Do Not Allow Silicone to Squeeze and Contact Rear of Speaker Cone



WARRANTY POLICY

PQN Enterprises, Inc. audio products are warranted to be free of manufactured defects in materials and workmanship for a period of 1 (one) year from date of original purchase.