


Spa15 Speaker

Install Guide

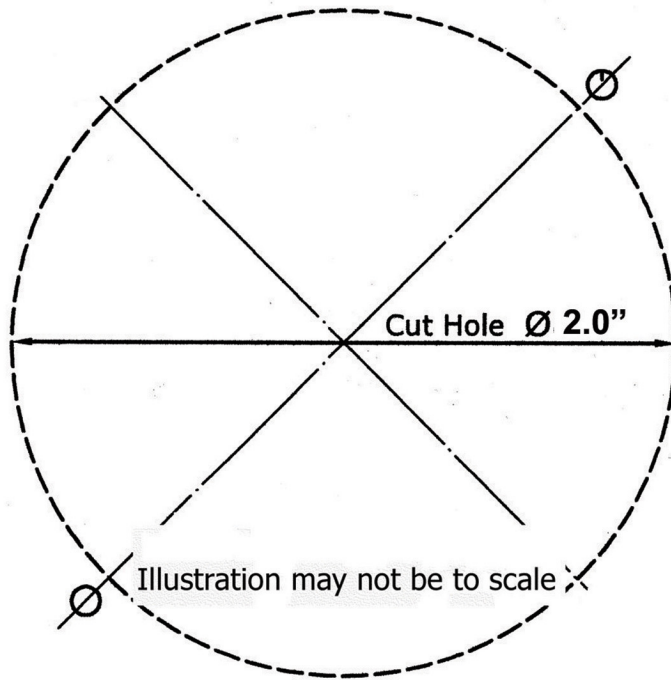

- 1- Find a flat location for speaker placement
- 2- Use template dimensions for proper spacing
- 3- Cut 2 - 2.125" hole
- 4- Position speaker & mark screw holes
- 5- Drill 1/16" pilot holes for the screws
- 6- Position U-clip nut over end of screw and tightened, if included
- 7- Connect pos. wire (+) to red speaker wire
- 8- Connect neg. wire (-) to black speaker wire
- 9- Apply bead of non-caustic sealant to rear speaker flange (if desired)
- 10- Secure speaker with provided hardware (if front mounting)
- 11- To rear mount feed wires thru nut prior to connecting wires. Do not over-tighten.
- 12- Connect wires. Snap cover grill in place.

NOTE: When Using Silicone Sealant Do Not Allow Any To Make Contact With Speaker Cone or Surround

Specifications

Power: 15WMax

Imp: 6 ohm

Wt. <1#

Mounted Depth: 1.75"

IP68 / REACH / RoHS / CE



Morro Bay, CA 93442
805.794.6475
www.pqnaudio.com

Warranty Policy

PQN Audio products are warranted to be free of manufacturing defects for a period of one (1) year. Warranty is subject to proper installation & application. Warranty does not cover exposure to excessive chemical usage or operational abuse. Return defective product prepaid to point of purchase for replacement or refund as determined by PQN. Warranty is not transferable. Proof of Purchase must be included.

